

Sururi-Ito STAND

MADE IN JAPAN

< Material / Natural Beech Wood >



《CONTACT INFORMATION》

Ogawa Sensyoku co.,ltd

23 Kazeta, Aza Oku-cho, Ichinomiya-shi,
Aichi-ken, JAPAN 491-0201

TEL: 81-586-62-1241

<http://sururi-ito.com>

mail@ogawa-sensyoku.co.jp



vertical style
Sururi-Ito STAND

INSTRUCTIONS

The unlikely but real device
to smoothly pull out yarn for
knitting

CHARACTERISTICS

of Sururi-Ito STAND(vertcital style)

- SIMPLE:Yarn comes out from the bottom of the stand through the paper tube threaded from the top of the stand
- EASY:You find knitting easy and enjoyable with the stand stable on desk.
- STABLE:No worries to drop the stand; it's extremely stable.

USE PRECAUTIONS

- The appropriate size of paper tubes for Sururi-Ito STAND (vertical style) is:
Approxiatly 28 millimeters in the external diameter at the upper part of the paper tube.
Approxiatly 45 millimeters in the internal diameter at the lower part of the paper tube.
- Push down the yarn with your hands so that you make some space on the top of the paper tube to order to attach the upper part in case the top of the paper tube is covered with the yarn
- It probably becomes a bit harder for the thread to be pulled out from the tube when the yarn on the tube decreased in quantity.
(It can happen when the yarn wall thickness around the tube becomes less 5 millimeters)
* In such a case, you're encouraged eather to pull out the yarn holding with your hands, or to pull out the yarn with the upper part unattached
- The yarn could be pulled out less smoothly depends on the yarn types, the yarn thickness, or the yarn conditions on the paper tube.

SAFETY PRECAUTIONS

- Don't let your children use without the parental supervision.
- Don't leave the device in derect sunlight or in extreme temperatures in order to prevent the deterioration.
- Don't get wet.
- Stop the use of the device immediately in its changing the shape or its being damaged.
- Use only for intended purpose.
- Follow the local disposal procedures when discarding.


How To Use Sururi-ITO STAND (sphere style)



Sururi-ITO STAND(vertcital style) has three parts: the part A(the upper part), the part C(the lower part), and the part B(the paper tube with yarn spun).



Attach the paper tube to the part C, and put the part A on the top of the paper tube.

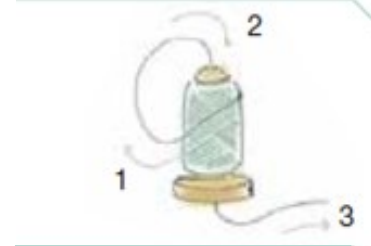

Pick up the yarn from the top of the paper tube, and thread the top of the top of the part A, and pull out it from the bottom of the part C, following the flow in the image.



The yarn threaded can be pulled out from the small hole at the bottom of the device.



The set-up is now completed. Pull out the yarn horizontally. Don't pull out diagonally upwards, or the stand will fall down.

Sururi-Ito STAND

MADE IN JAPAN

< Material / Natural Beech Wood >



《CONTACT INFORMATION》


Ogawa Sensyoku co.,ltd

23 Kazeta, Aza Oku-cho, Ichinomiya-shi,
Aichi-ken, JAPAN 491-0201

TEL: 81-586-62-1241

<http://sururi-ito.com>

mail@ogawa-sensyoku.co.jp

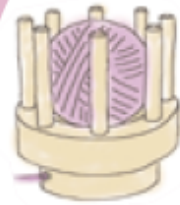

sphere style
Sururi-Ito STAND

INSTRUCTIONS

The unlikely but real device
to smoothly pull out yarn for
knitting

SOFT TEXTURE OF NATURAL BEECH WOOD

CHARACTERISTICS of Sururi-Ito STAND(sphere style)

Easy:

The round shape helps you pull put the yarn smoothly.

Convenient:

You'll be able to enjoy knitting with the stand stable on the table.


USE PRECAUTIONS

- Balls of yarn within 10 centimeters in diameter are available for the device.
- The yarn could be pulled out less smoothly depends on the yarn types, the yarn thickness, or the types of the balls of yarn.


SAFETY PRECAUTIONS

- Don't let your children use without the parental supervision.
- Don't leave the device in derect sunlight or in extreme temperatures in order to prevent the deterioration.
- Don't get wet.
- Stop the use of the device immediately in its changing the shape or its being damaged.
- Use only for intended purpose.
- Follow the local disposal procedured when discarding.

How To Use Sururi-ITO STAND (sphere style)

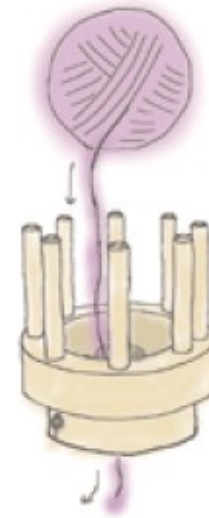

Thread the hole in the center of the stand and put the ball of yarn in the stand.

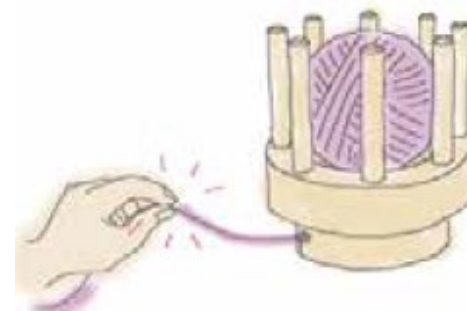

Pull out the thread from the small hole on the side at the bottom of the stand, which comes from the center hole. Pull out the yarn horizontally. Don't pull out diagonally upwards, or the stand will fall down.